


# Table of Contents

**Start** ..... 1



## Start

- → follow the test procedure
- → follow the power off procedure
- remove the key and take it with you ⚠️ so nobody can accidentally switch on the box and press buttons etc
- prepare your rocket according to your safety rules and procedures
- connect the starter cables
- before power on → double check all switches are in a 'safe' position (off/safe)
- → follow the power on procedure
- shout out a countdown of at least 5 seconds → on T-3 seconds move arm switch up to armed position
  - the internal buzzer will beeeeeep if the ignitor is connected and everything is ok
  - the red light above the start button will light up
- to launch rocket press the start button
  - the ignitor inside the rocket engine will fire
    - the red light above the start button goes off
    - the buzzer stops beeping

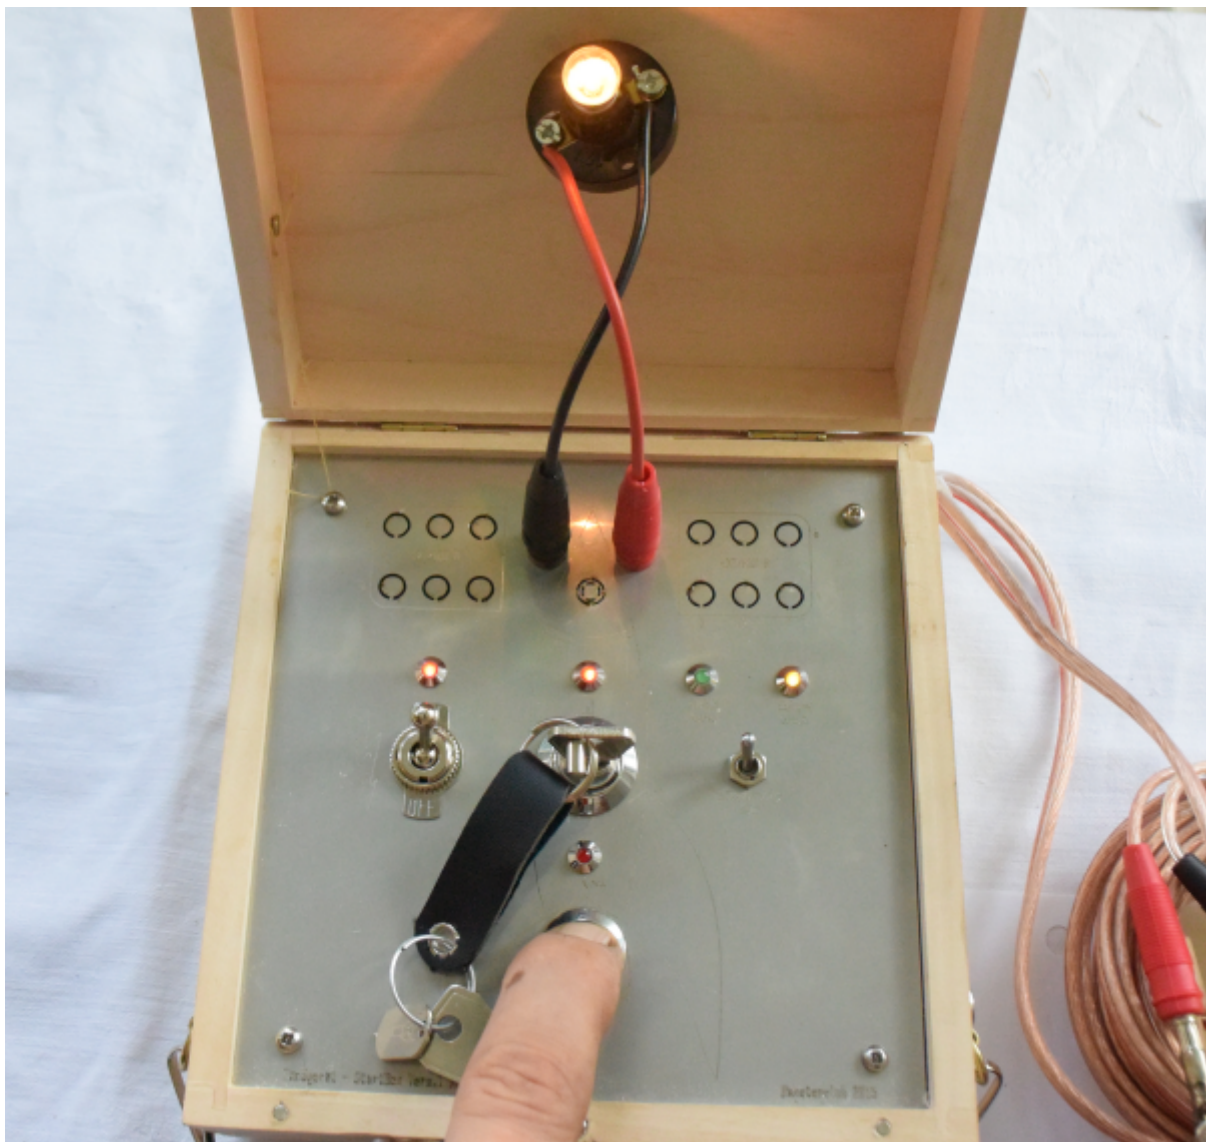

- if nothing happens after ~5 seconds follow you safety rules to ensure misfire of the rocket (power off box, disconnect cables, wait for a few minutes)
- enjoy launch
- → power off
- recover rocket

From:

<https://wiki.raketenclub.de/> - **RaketenClub**

Permanent link:

[https://wiki.raketenclub.de/rc/prj/startbox/v1.0/50\\_proc/90\\_start](https://wiki.raketenclub.de/rc/prj/startbox/v1.0/50_proc/90_start)

Last update: **2020/09/07 23:57**

